



Selectable Contact Output Module

Cat. No. 1771-OW

To The Installer

This document provides information on:

- important pre-installation considerations
- power supply requirements
- installing the module
- connecting the wiring
- using the indicators on the module for troubleshooting
- module specifications

Pre-installation Considerations

These modules do not contain surge limiting circuitry. Use these modules for switching resistive loads only. They are not recommended for inductive or capacitive loads.

The outputs are arranged in 4 groups of 2, each group with its own common. Each output is electrically isolated from module logic circuitry. The module can simultaneously switch all 8 outputs to separate loads, each conducting a maximum load of 1.0A continuously, at rated power. Ac loads switched by the modules should have a power factor (PF) of 1.0.

Maximum interconnect cable length for these modules is 1000 ft. (304.8 meters).

Power Supply Requirements

The controller or I/O chassis power supply, connected through the backplane of the I/O chassis, powers the logic circuitry of the contact output modules. This supply also provides the necessary power to energize the coils of the module relays. The maximum current drawn from this supply when all coils are energized is 700mA.

Installing Your Module

In this section we tell you how to initially handle your module, key your I/O chassis, set the relay output jumpers, install your module and make your wiring connections.

Initial Handling Procedures



ATTENTION: Remove power from the 1771 I/O chassis backplane and wiring arm before removing or installing an I/O module.

- Failure to remove power from the backplane or wiring arm could cause module damage, degradation of performance, or injury.
 - Failure to remove power from the backplane could cause injury or equipment damage due to possible unexpected operation.
-

The contact output module contains components which can be damaged by electrostatic discharge. The module is shipped in an electrostatic shielded bag for protection. Follow the handling procedures outlined below to guard against damage to your module.

- Touch a grounded object to discharge yourself before handling the module.
- Do not touch the backplane connector or connector pins.
- If you configure or replace internal components, do not touch other circuit components inside the module. If available, use a static-safe work station.
- When not in use, keep the module in its static-free shield bag.

Keying the I/O Chassis

Use the plastic keying bands, shipped with each I/O chassis, to key your I/O slots to accept only this type of module. Place the keying bands on the chassis backplane between:

- 6 and 8
- 16 and 18

Slots on the rear edge of the circuit board are matched to these slots to allow insertion of this type of module. You can key any connector in an I/O chassis to receive this module except for the leftmost connector reserved for adapter or processor modules.


Setting the Relay Output Jumpers

When the output image table bit at the address corresponding to any output is energized (set to 1), the corresponding relay contact is closed or opened, respective to the jumper setting.

All outputs are individually selectable for either normally–open or normally–closed operation. They are pre–set for normally–open operation at the factory. To reset any jumper, proceed as follows:

1. Remove the 4 screws from the side cover and separate the circuit board from the 2 covers.
2. Move the jumper to the desired position (see below). Jumpers are identified by jumper number and use (N.O. or N.C.).
3. Reinstall the circuit board in the module and replace the cover.

Figure 1
Relay Output Jumper Setting

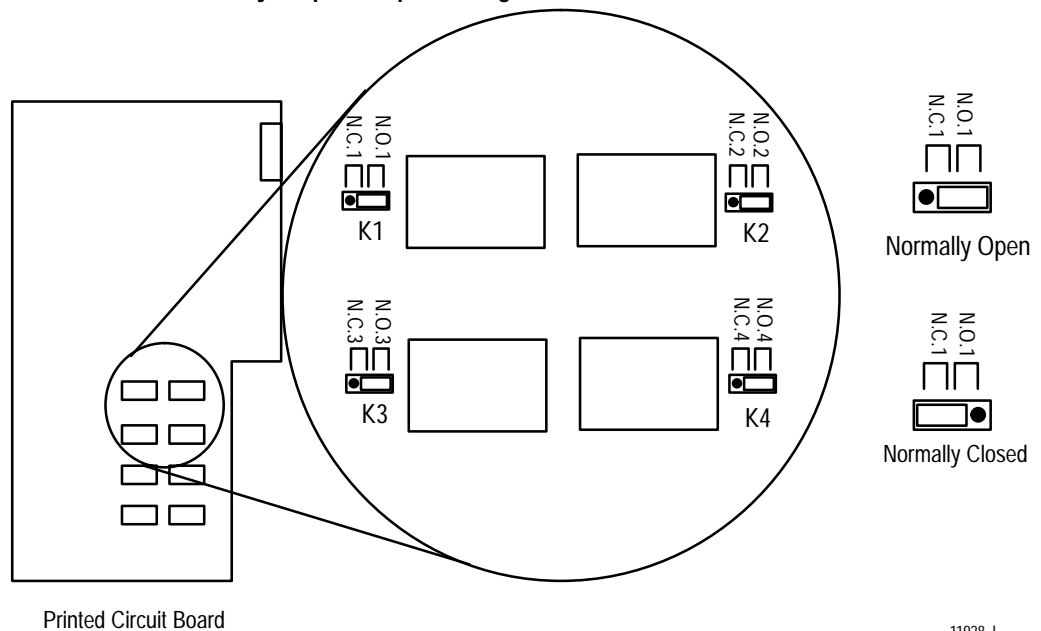

Inserting the Module Into the Chassis

1. Position the module so that the circuit board on the rear of the module lines up with the top and bottom card guides in the chassis.
2. Slide the module into the chassis.
3. Press firmly to seat the module in the chassis backplane connector.
4. Swing the module locking latch down into place over the front edge of the module.

Connecting Wiring to the Module


You make connections to the module through the field wiring arm cat. no. 1771-WD. The arm pivots on the I/O chassis to connect with terminals on the front of the module and acts as a terminal strip. The wiring arm allows the module to be removed from the chassis without disconnecting wiring.

1. Make certain all power is removed from the module before making wiring connections.
2. Swing the wiring arm up into position on the front of the module. The locking tab on the module will secure it into place.
3. Make your connections to the field wiring arm as shown below. (Use the label on the front of the wiring arm to identify your wiring.)




ATTENTION: The field wiring arm terminal identification number is not the same as the number of the bit which controls that output.

Connection Diagram for the Selectable Contact Output Module (Cat. No. 1771-OW)

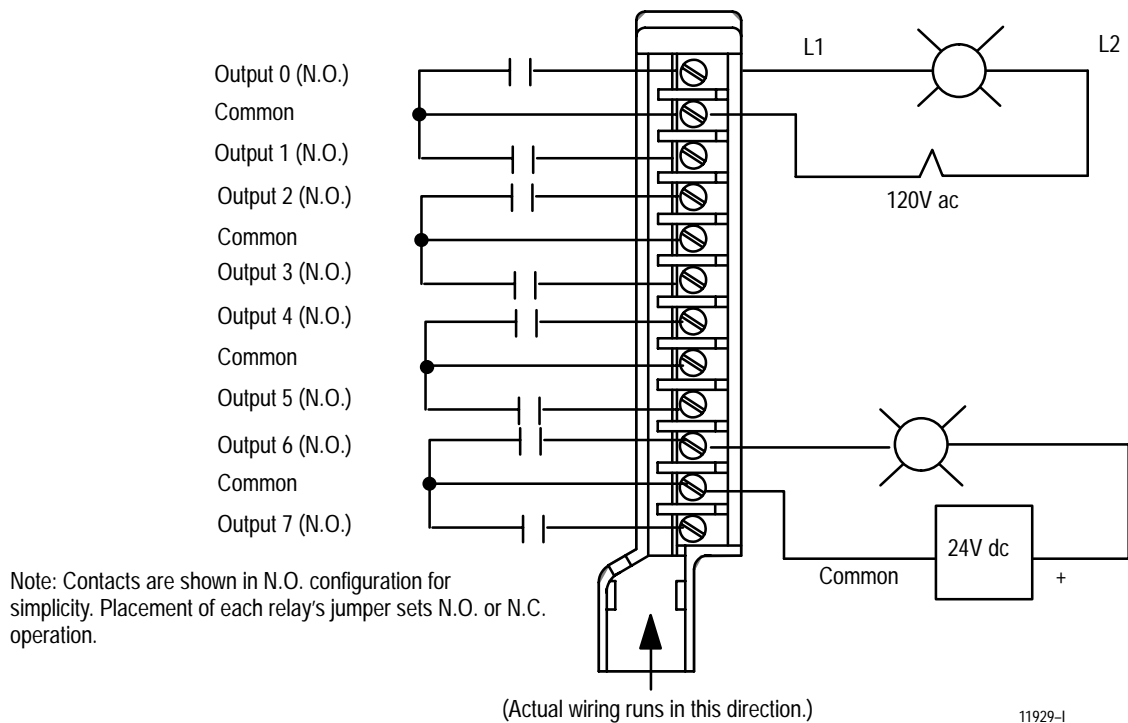


Connection Diagram for the 1771-OW Selectable Contact Output Module Driving a 120V ac Input Module

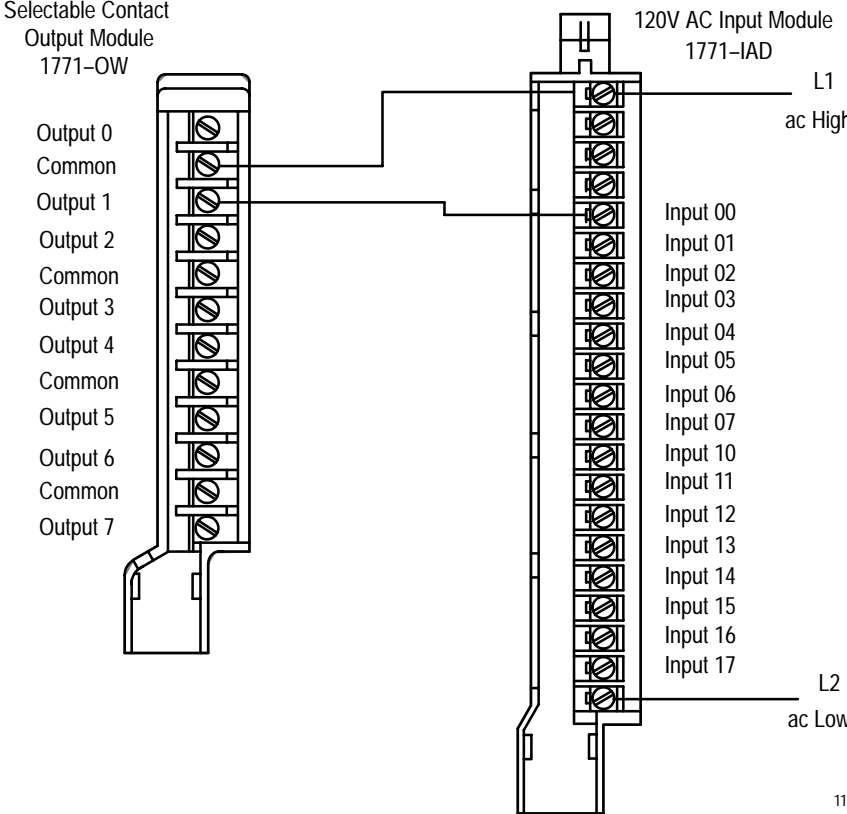

ATTENTION: Do not attempt to increase load current or wattage capability beyond the rating by connecting two or more outputs in parallel. The slightest variation in output relay switching time may cause one set of contacts to switch the total load current.

Interpreting the Status Indicators

The module has 8 status indicators on the module front plate. These represent the control status of the output relays. Each indicator is lit when its corresponding relay is energized.

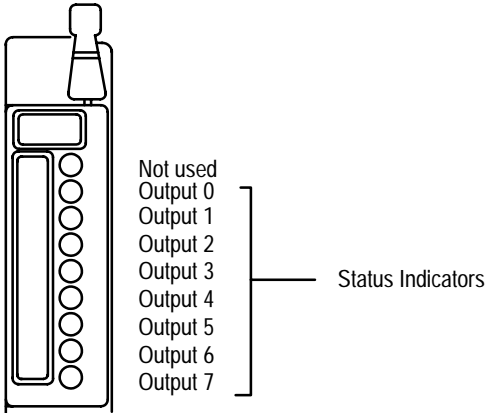


Specifications

Outputs per Module	8 (4 groups of 2)
Module Location	1771 I/O chassis
Voltage Rating	24 – 138V ac RMS 24 – 125V dc
Current Rating ¹	1A per output (maximum) ²
Surge Current	1A maximum per output (at rated power)
Power Rating	dc: 30W per output (resistive) ac (suppressed) ¹ : 30W per output (resistive)
Minimum Contact Load	dc: 10mA @ 24V ac: 10mA @ 24V
Operate/Release Time	5ms maximum
Bounce Time	1ms maximum
Switching Frequency	10Hz maximum
Power Dissipation	3.7 Watts (max.); 3.3 Watts (min.)
Thermal Dissipation	12.6 BTU/hr (max.); 11.3 BTU/hr (min.)
Backplane Current	700mA maximum
Conductors	Wire Size Category
	14 gauge stranded maximum 3/64 inch insulation maximum ¹ ³
Environmental Conditions	
Operating Temperature	0 to 60°C (32 to 140°F)
Storage Temperature	-40 to 85°C (-40 to 185°F)
Relative Humidity	5 to 95% (without condensation)
Keying	Between 6 and 8 Between 16 and 18
Field Wiring Arm	1771-WD
Wiring Arm Screw Torque	7-9 inch-pounds

¹ Spikes, peaks and surges must be within the power rating. Resistive loads only. AC or DC power = 30W max.
² Surge limiting circuitry is not provided in the module. For reliable operation, the user must ensure that surges do not exceed either the voltage or current rating of the module.
³ Refer to publication 1770-4.1, Programmable Controller Wiring and Grounding Guidelines.



 Allen-Bradley, a Rockwell Automation Business, has been helping its customers improve productivity and quality for more than 90 years. We design, manufacture and support a broad range of automation products worldwide. They include logic processors, power and motion control devices, operator interfaces, sensors and a variety of software. Rockwell is one of the world's leading technology companies.



Worldwide representation.

Argentina • Australia • Austria • Bahrain • Belgium • Brazil • Bulgaria • Canada • Chile • China, PRC • Colombia • Costa Rica • Croatia • Cyprus • Czech Republic • Denmark • Ecuador • Egypt • El Salvador • Finland • France • Germany • Greece • Guatemala • Honduras • Hong Kong • Hungary • Iceland • India • Indonesia • Ireland • Israel • Italy • Jamaica • Japan • Jordan • Korea • Kuwait • Lebanon • Malaysia • Mexico • Netherlands • New Zealand • Norway • Pakistan • Peru • Philippines • Poland • Portugal • Puerto Rico • Qatar • Romania • Russia-CIS • Saudi Arabia • Singapore • Slovakia • Slovenia • South Africa, Republic • Spain • Sweden • Switzerland • Taiwan • Thailand • Turkey • United Arab Emirates • United Kingdom • United States • Uruguay • Venezuela • Yugoslavia

Allen-Bradley Headquarters, 1201 South Second Street, Milwaukee, WI 53204 USA, Tel: (1) 414 382-2000 Fax: (1) 414 382-4444